
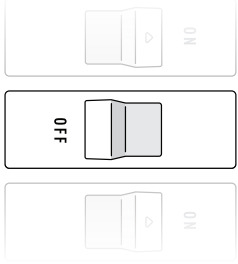
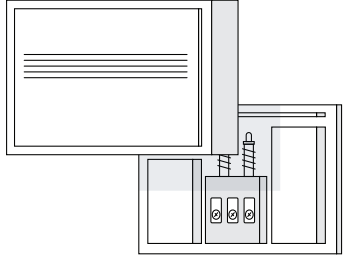
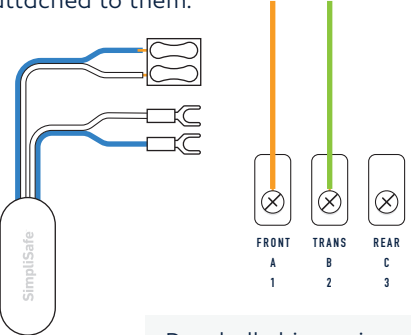

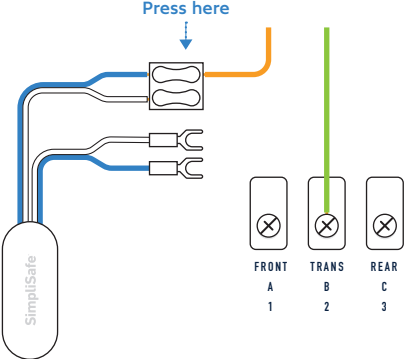
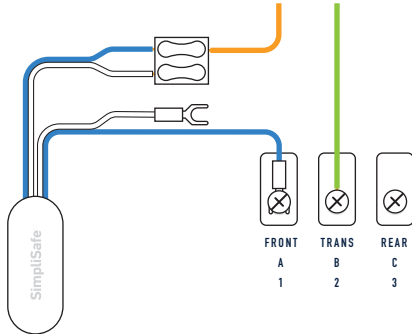
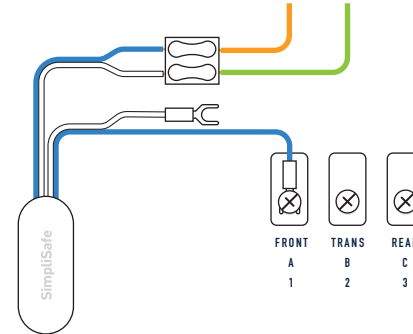
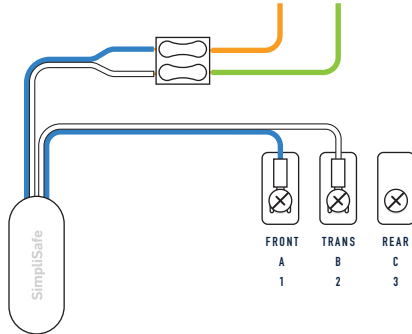
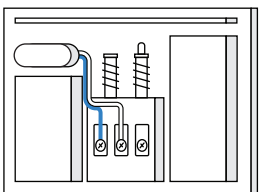


FRONT

<div>SimpliSafe</div> <div>Video Doorbell Pro Installation Guide</div>	<div>Prefer a video guide?</div> <div>Scan QR code to start watching.</div> <div></div> <div><small>NOTICE: UK privacy laws may require installing the doorbell where it can only record activity on the boundaries of your premises (e.g., not a neighbouring property, home or garden, shared spaces or a public place not in the boundaries of your property, such as a footpath, park or street). Please review our Privacy Policy at simplisafe.co.uk/privacy-policy for additional information on proper usage of this device. Individuals may have privacy rights when it comes to audio recordings. It is your responsibility to comply with these rights.</small></div>	<div>NOTICE</div> <div>The Video Doorbell Pro requires a transformer rated for 8-24VAC, 10-30VA and a mechanical chime. This product should not be used with higher voltage transformers. Digital chimes are not compatible.</div> <div>Please consult a qualified electrician if you are unsure if your home meets these requirements. Failure to meet these requirements may result in damage to your doorbell, home, or property.</div> <div>You will need a Phillips-head screwdriver and possibly a drill for mounting.</div>	<div>1</div> <div>Turn off the power to your doorbell at the circuit breaker</div> <div></div> <div><small>TIP: To locate the correct breaker, try turning off one at a time and testing the existing doorbell.</small></div> <div><small>⚠ WARNING: Risk of electrical shock. Before starting installation, turn off power to your doorbell at the circuit breaker or fuse box. Always use caution when handling electrical wiring. Permits and installation by a qualified electrician may be required in your area. Check local laws and building codes before performing any electrical work.</small></div>	<div>2</div> <div>Find your doorbell chime, then remove the cover</div> <div>Some covers can be lifted off. Others may need to be unscrewed.</div> <div></div>	<div>3</div> <div>Find the Chime Connector included with your Video Doorbell Pro, then locate the screw terminals on the chime</div> <div>Terminals might be labeled as Front/Trans/Rear, A/B/C, or 1/2/3. You will be using the middle ("Trans") and left or right ("Front") terminal, which should have wiring attached to them.</div> <div></div> <div><small>TIP: Doorbell chime wire colors may vary.</small></div>
<div>Need assistance?</div> <div>Scan QR code to contact the help center.</div> <div></div>	<div>4</div> <div>Disconnect the "Front" wire and insert it into the Chime Connector's blue wire connector clip</div> <div>Trim the exposed wire to 1/4" before inserting into the wire connector.</div> <div></div>	<div>5</div> <div>Connect the other blue wire from the Chime Connector to the "Front" terminal</div> <div></div>	<div>6</div> <div>Disconnect the "Trans" wire and insert it into the Chime Connector's white wire connector clip</div> <div>Trim the exposed wire to 1/4" before inserting into the wire connector.</div> <div></div>	<div>7</div> <div>Connect the other white wire from the Chime Connector to the "Trans" terminal</div> <div></div>	<div>8</div> <div>Find a place to put your Chime Connector, then replace the cover</div> <div>You can use the adhesive backing to stick the Connector outside the box, or tuck it inside away from moving parts.</div> <div></div> <div>Flip to the other side to install your Video Doorbell Pro ▶</div>

BACK

<div>9</div> <div>Now let's install the Video Doorbell Pro</div> <div>Unscrew your existing doorbell and disconnect the wires. Make sure the wires do not fall back into the wall.</div> <div></div> <div><small>TIP: Wrap the wires around a pencil or use tape to prevent them from falling back into the wall.</small></div>	<div>10</div> <div>Thread the doorbell wires through the center of the mounting bracket</div> <div></div> <div><small>NOTE: To adjust the angle of your Video Doorbell Pro, use the included angled mount and follow the instructions in Optional Install A below.</small></div>	<div>11</div> <div>Screw the mounting bracket to the wall</div> <div>Mark the two mounting holes, then remove the cardboard "Clearance" marker and use the included 1" screws to attach the bracket to the wall. You can use a drill to make pilot holes for the screws.</div> <div></div> <div><small>NOTE: To install on a stone, brick, or stucco surface, go to Optional Install B below.</small></div>	<div>12</div> <div>Connect the wires to the mounting bracket</div> <div><ol style="list-style-type: none">Loosen terminal screws.Slide exposed wire behind the square washers and around each screw (wires can connect to either screw).Tighten screws to secure wires.</div> <div></div> <div><small>TIP: Place the wire ends to the left of each screw to prevent ends from touching.</small></div>	<div>13</div> <div>Slide your Video Doorbell Pro into place</div> <div><ol style="list-style-type: none">Place the Video Doorbell Pro on the mounting bracket and slide down until it clicks.Turn on the power to your Video Doorbell Pro at the circuit breaker.</div> <div></div> <div></div>	<div>14</div> <div>Test the chime connection</div> <div>Wait 1-2 minutes for the Video Doorbell Pro to power up and then press the doorbell button. Did your chime ring, and the LED ring blink white? If it did not, turn off the power, check that the wires are secure, then turn the power on again and retry.</div> <div>If you encounter any of the following problems, refer to the instructions on the other side to reinstall your Chime Connector or contact customer support.</div> <div><ol style="list-style-type: none">Chime rings continuously.Chime "dings, but doesn't dong" or stops prematurely.A buzzing noise coming from the chime.</div>
<div>15</div> <div>Secure Video Doorbell Pro</div> <div>Use the provided screwdriver to insert the security screw.</div> <div></div> <div>(See next page for safety precautions.)</div>	<div>Caution</div> <div>If you use the wrong screw to secure the Video Doorbell Pro to the mounting bracket, you could damage the battery during installation, create a fire hazard, or be seriously injured.</div> <div>DO NOT use any screw other than the included short security screw when securing your doorbell to the bracket.</div> <div></div>	<div>16</div> <div>Now it's time to connect to Wi-Fi</div> <div>To complete installation, add your Video Doorbell Pro in the SimpliSafe® App.</div> <div></div> <div>Scan this QR code to download the SimpliSafe® App:</div> <div></div>	<div>Optional Install (A)</div> <div>Installing the angled mount</div> <div>Use the angled mount to ensure the Video Doorbell Pro captures the desired view.</div> <div><ol style="list-style-type: none">Line up the angled mount and mounting bracket.</div> <div>Align the wall plate and angled mount together and then thread the wires through the center of the openings.</div> <div></div>	<div>Optional Install (B)</div> <div>Installing on stone, brick, or stucco surfaces</div> <div>First, mark the hole location.</div> <div>Mark the wall first with a pencil, and be sure to use the mounting bracket holes as a template.</div> <div>Then, drill holes and insert wall anchors.</div> <div>Drill a hole at each pencil mark with 3/16" (4.75mm) masonry bit. Insert wall anchors into the holes by gently tapping with a hammer or mallet.</div> <div></div> <div>Return to Step 12 to continue install</div>	<div>Return to Step 11 to continue install</div> <div></div> <div>STR-10922-00 ART-10951-00</div>