

Product Safety Information

READ BEFORE USE TO AVOID INJURY

Save these safety guidelines for future reference.

This product contains a Lithium-Ion Battery.

⚠ **WARNING:** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

⚠ **CAUTION:** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

Battery

⚠ **WARNING:**

- Indoor use and charging only
- Do not incinerate camera even if the battery is severely damaged or completely worn out. Battery can explode in a fire.
- Toxic fumes and materials are created when the battery is burned.
- **Burn Hazard.** Battery liquid may be flammable if exposed to spark or flame.
- Under abusive conditions, liquid may be ejected from the battery, avoid contact. Liquid ejected from the battery may cause irritation or burns.
 - If battery contents come into contact with the skin, immediately wash area with mild soap and water.
 - If battery liquid gets into the eye, rinse water over the open eye for 15 minutes or until irritation ceases and seek medical help.
- Contents of opened battery cells may cause respiratory irritation. Provide fresh air. If symptoms persist, seek medical attention.
- Do not disassemble, impact or squeeze.
- If the camera bulges significantly, or is hot to the touch, stop using immediately.
- Always keep camera away from children.
- Never attempt to open camera for any reason. Do not crush, drop or damage the camera.
- Do not use a camera that has received a sharp blow, been dropped, run over or damaged in any way (e.g., pierced with a nail, hit with a hammer, stepped on).
- Do not charge or use camera in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Doing so may ignite the dust or fumes.

⚠ **CAUTION:**

- Do not store camera in high temperature environments that may reach or exceed 120°F (48°C) (such as outside sheds or metal buildings in summer or hot climates). Do not charge or use camera after exposure to high temperatures.
- DO NOT splash or immerse in water or other liquids. This may cause premature battery failure.

Charging

- Use only a micro USB cable to charge battery.

⚠ **WARNING:**

- Do not let the camera get wet. Do not allow any liquid to get on the

charging cable or camera.

- Do not charge if damaged.
- Do not use an extension cord when charging. Doing so could result in risk of fire, electric shock or electrocution.
- Do not use damaged USB cable or plug to charge camera. Doing so may result in a risk of electric shock, electrocution or fire.
- To reduce risk of electric shock from outlet, disconnect plug from outlet before attempting any cleaning.
- If camera case is cracked or damaged, do not charge.

⚠ **CAUTION:**

- Pull by plug rather than cable when disconnecting from power source. This will reduce risk of damage to electric plug and USB cable.
- Make sure the USB cable will not be stepped on, tripped over, or otherwise subjected to damage or stress while charging.

Informational

- If the camera's internal temperature exceeds 85°C, the camera will automatically shut down and will not turn on or charge until it reaches a safe internal operating temperature.
- When not in use, store in a cool and dry place away from direct sunlight and excess heat or cold.
- If medical attention is needed, the battery electrolyte for Lithium-Ion batteries is composed of a mixture of liquid organic carbonates and lithium salts.
- Damaged cameras should be returned to a service center for recycling.
- Long storage will not harm the battery.
- Do not throw the camera away with household trash. Dispose of the camera in accordance with state and local regulations for battery powered devices.